




DSL110 Installation Instructions

RECOMMENDED TOOLS:

Ratchet with 13mm, and 9/16" sockets
9/16" wrench
Jack and jack stands or service lift

INSTALLATION:

1. Lift vehicle and support safely under frame rails.
2. Support the transmission using a jack stand or jack.
3. Remove the (4) transmission cross-member bolts using an 13mm socket.
4. Place the BMR main mounting bracket under the OE cross-member and install the factory hardware using a 13mm socket as shown in **IMAGE 1**.
5. Position the BMR loop over the driveshaft and set it on top of the main mounting bracket. Insert the supplied 3/8" x 1.25" bolts, nuts, and washers as shown in **IMAGE 2**.
6. With the mounting bolts loose, shift the loop side to side to reach maximum clearance then tighten all bolts. Tighten main transmission cross-member bolts to 32 ft/lbs and driveshaft loop bolts to 35 ft/lbs.
7. Lower vehicle.

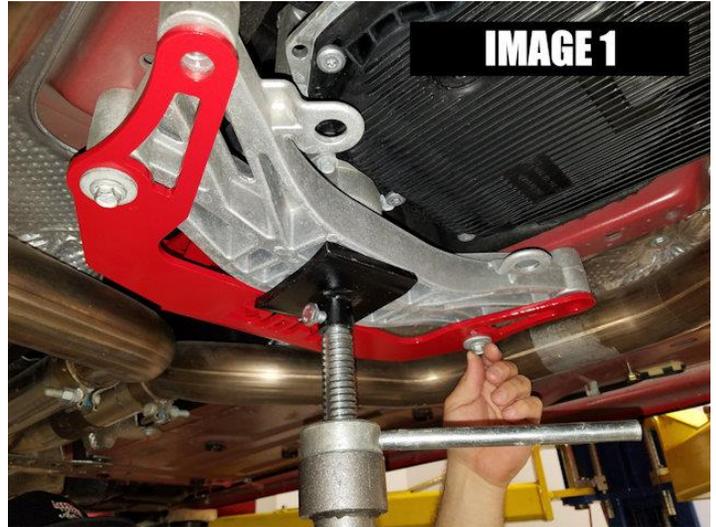

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to vehicle/person during installation or use of this product.