



## DTB005 INSTALLATION INSTRUCTIONS


### TOOLS NEEDED:

Hydraulic jack and jack stands

13mm socket and ratchet

### INSTALLATION:

1. Lift vehicle and safely support with stands under the frame rails.
2. Using a 13mm socket, remove the (5) bolts that retain the OE brace to the floor pan.
3. Once the OE brace has been removed, bolt the BMR brace onto the floor pan using the factory hardware. Place the two aluminum spacer washers under the front two bolts as shown in **IMAGE 2**.
4. Tighten all five bolts to 16 ft/lbs.
5. Lower vehicle.

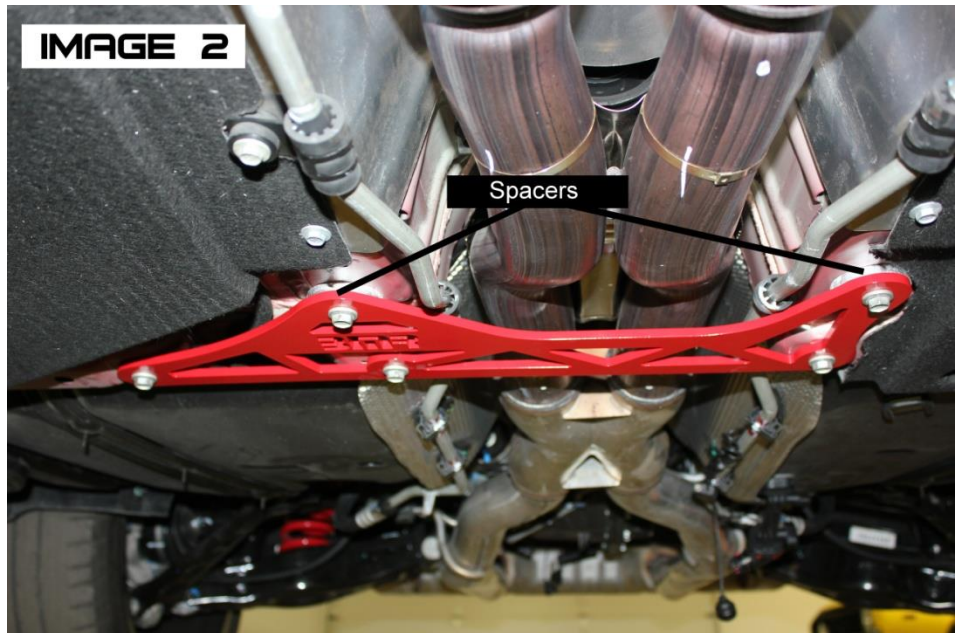

[WWW.BMRSUSPENSION.COM](http://WWW.BMRSUSPENSION.COM)

*This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, Buyer assumes all risk of any caused to the vehicle/person during installation or use of this product.*