




1981-1992 Camaro/Firebird Chassis Steering Brace

TOOLS REQUIRED:

- Hydraulic jack and jack stands
- Metric and standard socket and wrench set

INSTALLATION:

1. Lift the front of the vehicle and safely support on jack stands.
2. Use a 15mm socket to unbolt the factory sway bar saddles. Leave the end-links connected and allow the sway bar to droop so the chassis brace can be slid into place.
3. Remove the single (1) chassis bolt on the driver's side and the two (2) chassis bolts on the passenger's side.
4. Loosely install the chassis brace and replace the three (3) chassis bolts with the supplied hardware.
5. Loosely install the sway bar with the last four (4) fasteners and four (4) remaining holes. Loosely bolt the sway bar saddles to the brackets so you can properly center the sway bar.
6. Using a 15mm socket or wrench, tighten the sway bar saddles to the brackets and tighten all fasteners.
7. Set the car back on the ground.

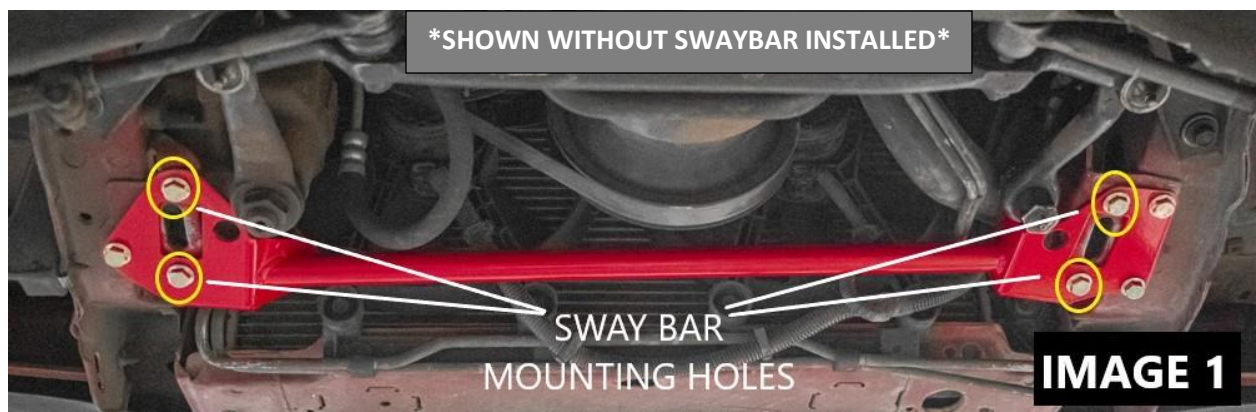

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, Buyer assumes all risk of any damage caused to the vehicle or person during installation or use of this product.