




## 3<sup>rd</sup> Gen Camaro Front Sway Bar Installation Instructions

### TOOLS REQUIRED:

- Hydraulic jack and jack stands
- Metric and standard socket and wrench set

### INSTALLATION:

1. Lift the front of the vehicle and safely support on jack stands.
2. Disconnect the factory sway bar endlinks
3. Use a 15mm socket to unbolt the factory sway bar saddles
4. Remove and discard the factory sway bar, mounts, and endlinks
5. Using the supplied hardware, attach the sway bar relocation brackets **IMAGE 1**

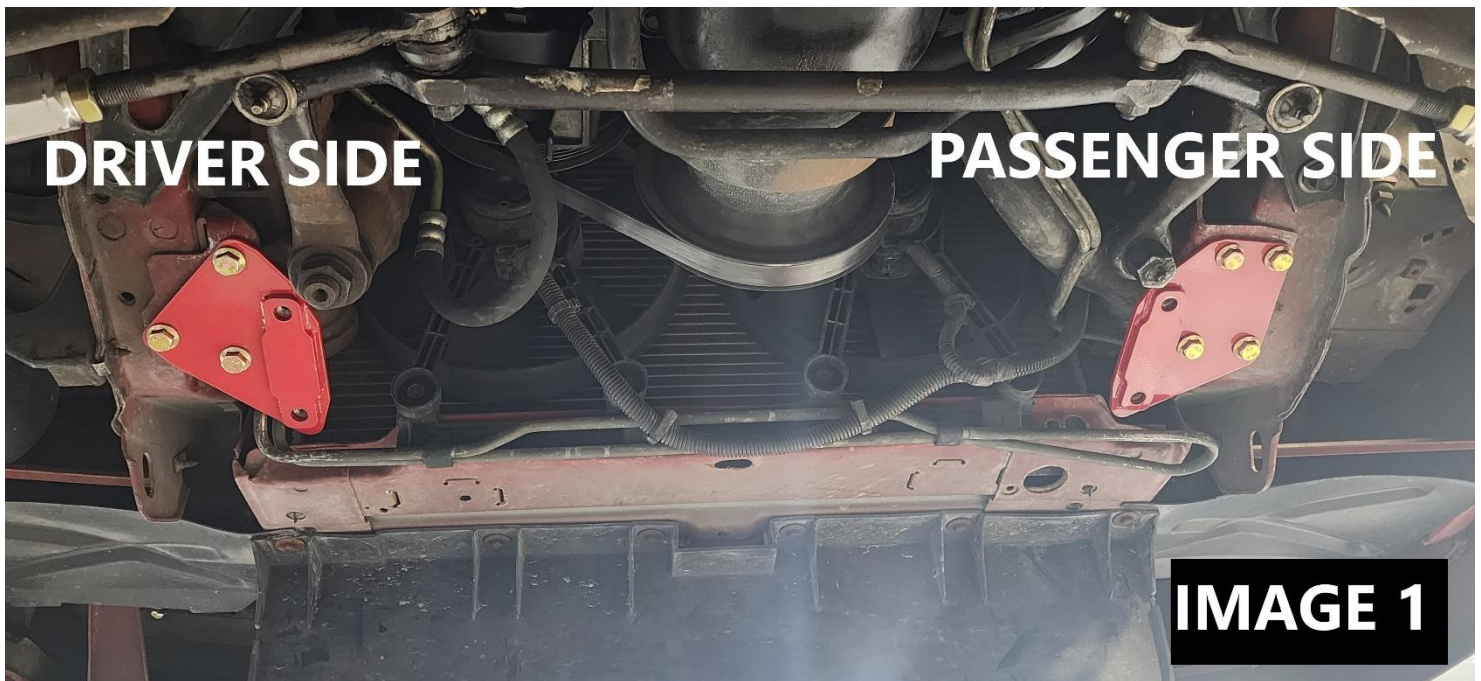


[WWW.BMRSUSPENSION.COM](http://WWW.BMRSUSPENSION.COM)

*This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, Buyer assumes all risk of any damage caused to the vehicle or person during installation or use of this product.*



## 3<sup>rd</sup> Gen Camaro Front Sway Bar Installation Instructions

6. Lubricate the bushings and saddles before sliding them onto the sway bar **IMAGE 2**
7. Loosely bolt the saddles to the brackets so you can properly center the sway bar
8. Fasten the endlinks through the control arm and the sway bar as shown in **IMAGE 3**
9. Final tighten the sway bar saddles to the brackets
10. Grease the zerk fittings and set the car back on the ground.

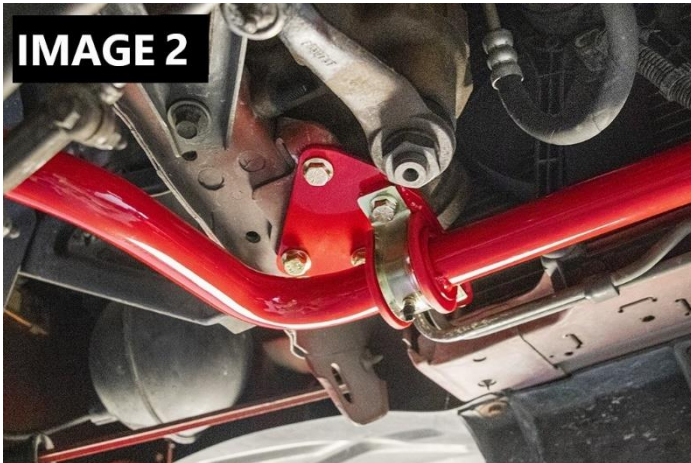

[WWW.BMRSUSPENSION.COM](http://WWW.BMRSUSPENSION.COM)

*This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, Buyer assumes all risk of any damage caused to the vehicle or person during installation or use of this product.*