




Strut Tower Brace Installation Instructions

REQUIRED TOOLS:

3/8" drive ratchet with 13mm socket
Torque wrench (optional)

INSTALLATION:

1. Open hood and locate the mounting holes shown in **IMAGE 1**.
2. Position the BMR Strut Tower Brace over these holes and insert the supplied 8mm bolts and washers.
3. Verify that brace is centered then tighten bolts to **25 ft/lbs**

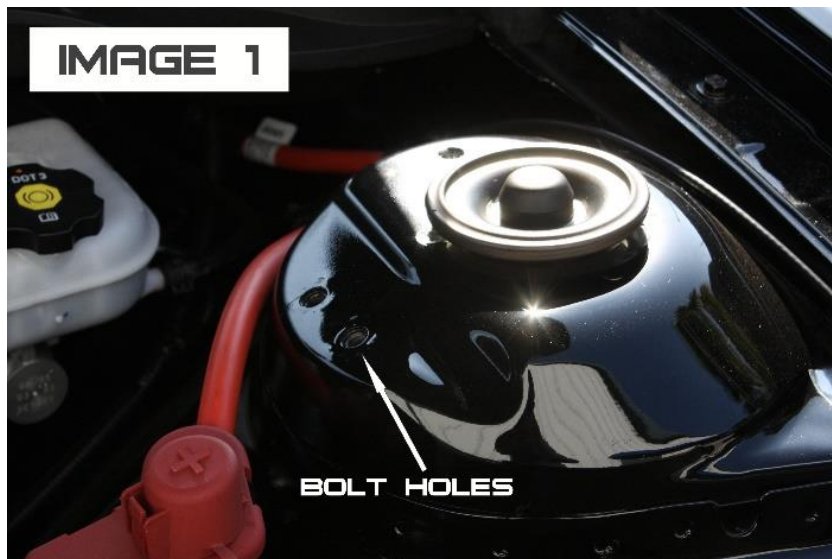

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, Buyer assumes all risk of any damage caused to the vehicle/person during installation or use of this product